

Door Entry Systems

Manual FT(B)30CC

Go to Google play app:

-choose "Application" in the home screen

- It is possible to set 1 App as main app so that it is always pushed to the foreground.

- Click on "settings" and then "network" at the top. There you will see the ip address of the FT(B)30CC.
- browse with a computer to the Ip address and log in with admin/admin
- Choose "device" and then "Third party APK"
- At "third party APK configuration" choose the app you want as main app.
- Intervals without operating: after this time without touching the screen, the main app will be forced to foreground again.
- Enable all options for optimal App control

The screenshot shows the 'Third Party APK Configuration' web interface. On the left is a dark sidebar menu with the following items: Device (selected), Time, Call Feature, Display Setting, Audio, Multicast, Monitor, Intercom, Relay, Third Party APK (highlighted), and Lift. The main content area is titled 'Third Party APK Configuration' and contains the following settings:

Setting	Value/Status	Help Icon
App Name	[Dropdown Menu]	?
Intervals Without Operating (Sec)	30	?
Start Up Enabled	<input checked="" type="checkbox"/>	?
Turn Back App	<input checked="" type="checkbox"/>	?
Turn Back App After Awakening	<input checked="" type="checkbox"/>	?
APP Keep-Alive	<input checked="" type="checkbox"/>	?

Below this is a 'General' section with the following settings:

Setting	Value/Status	Help Icon
Turn Back App After Calling	<input checked="" type="checkbox"/>	?
Show App Icon	<input checked="" type="checkbox"/>	?

At the bottom of the configuration area are two buttons: 'Cancel' and 'Submit'.



Door Entry Systems

Add cameras

1. Select “device” in the menu.
2. Go to “Monitor”.
3. Here you can first choose whether you want to display 4 cameras (multiple window) or 1 camera at a time.
4. Then click on add and add cameras. If the camera is not in a door phone, do not enter device number. If yes, this must be the number of the door phone on the sip server.

Tip: when the FT30CC is part of the Fasttel video kit FT600VK(K), the cameras of the door phones are automatically added.

Add Monitor X

Device Number	<input type="text" value="28"/>	?
Device Name	<input type="text" value="Voordeur"/>	?
RTSP Address	<input type="text" value="rtsp://192.168.10.215:8554/camera"/>	?
Username	<input type="text" value="admin"/>	?
Password	<input type="password" value="....."/>	?
Display In Call	<input type="text" value="Enabled"/>	?

Cancel

Submit

Wi-Fi

The WiFi of the FT(B)30CC can be activated on the monitor itself:

1. Settings → scroll left down for “advanced settings”
2. 123456 and confirm
3. Choose WIFI and turn it on
4. The network list is loaded
5. Choose your network and enter password

The WiFi will remain activated even if you use the RJ45 connection with PoE power only. In combination with the optional FT(B)30CCDESK+FT600WPS you can thus obtain a portable solution by placing the FT(B)30CC anywhere. This only using a normal power socket and WiFi.



Door Entry Systems

Connect external push button (eg apartment door)

Use the yellow and black (mass) wires from big connector